

IsoUs – Ultimate Step  
Plugin - AutoFileLoad

[www.promax.it](http://www.promax.it)



**PROMAX**


Motion  
&  
Control

The contained information in this handbook are only informative and they can being change without warning and they must not being understandings with some engagement from Promax srl. Promax srl does not assume responsibility or obligates for errors or inaccuracies that can be found in this handbook. Except how much granted from the license, no part of this publication can be reproduced, saved in a recording system or transmitted in whatever form or with any means, electronic, mechanical or recording system or otherwise without Promax srl authorization.  
Any reference to names of society or products have only demonstrative scope and it does not allude to some real organization.

Rev. 1.0.0 © Promax srl

# 1 Auto File Load

This Plugin allows to Load a Gcode file generated from an External System. When a configured file name is written in a shared folder, this Plugin, loads automatically the file in the EDITOR WINDOW.

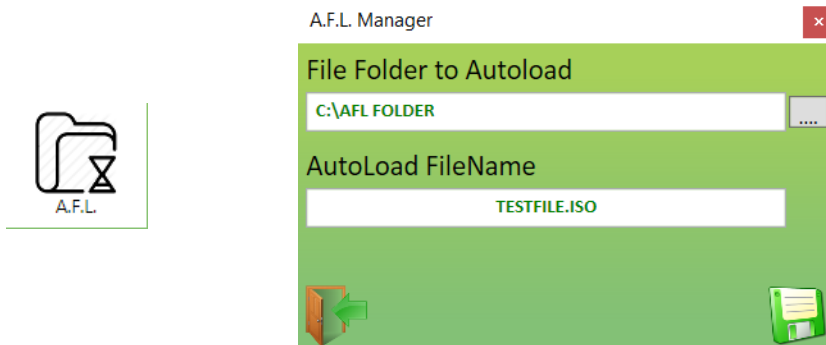

## 1.1 Plugin Configuration

For configure the Plugin, open it, by relative button and insert the following fields.

### Shared Folder



### Shared File Name



**Press Button Save to activate the configuration**



When the AFL Plugin, finds in the shared folder the shared name file, it is automatically load in the EDITOR WINDOW. This Process isn't actives during CNC in **RUN** or in **ERROR** status

## Index

1	Auto File Load .....	3
1.1	PlugIn Configuration.....	3