

# QUICK START GUIDE FLEXSLICE MODULES

P359 | P362 | P366 | P367 | P368 | P371 | P372 | P374 | P375 P376 | P377 | P378 | P379 | P386 | P387



During the installation or use of control systems, users of Trio products must ensure that there is no possibility of injury to any person or damage to machinery.

Control systems, especially during installation, can malfunction or behave unexpectedly. Bearing this in mind, users must ensure that even in the event of a malfunction or unexpected behaviour, the safety of an operator or programmer is never compromised.

### DESCRIPTION

The Flexslice system makes available a selection of digital and analogue I/O terminals as well as motion modules with pulse + direction or analogue voltage outputs designed for precise positioning of stepper and servo motors via suitable drive technology. The digital I/O modules have high-speed functionality and can sample each EtherCAT cycle, or use distributed clocks for greater accuracy. In addition, analogue modules and axis modules may be fitted to make a superbly tailored system that can be placed remotely from the master if needed.

All Flexslice modules support automatic addressing with the master able to automatically detect and configure the modules on startup. The coupler supports up to 16 input/output modules which have a positive mechanical lock and bus connector, making a reliable "backbone" style connection (EBUS). The complete assembly can be DIN rail mounted.


#### ASSEMBLING THE SYSTEM

One station consists of a P366 coupler and up to 16 Flexslice EtherCAT modules.

1. Align a Flexslice Module against the right hand side of the P366 Coupler Module.

2. Slide back the "click-to-lock" mechanism into position.

Removal of Flexslices is the opposite of this procedure.

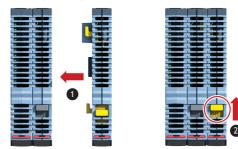

# SYSTEM LOADING:

Load count cannot exceed a "Maximum Load Count" (Max Load) for the Coupler.

Load count is calculated as a sum of "Unit Load" for all slices connected to the Coupler Module (P366) and can NOT exceed a total of 16.




### CONNECTORS

Power (24V) connector:

Note: Use ferrules on all wires for best connection.

- 1. Connection: Push wire into hole of connector. No tools are necessary.
- Removal: Push screwdriver against coloured button to release wire and pull wire out.


۲

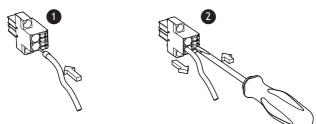


Data Connection (all modules):

Note: Use ferrules on all wires for best connection.

- 1. Connection: Push wire into hole of connector. No tools are necessary.
- Removal: Push screwdriver against coloured button to release wire and pull wire out.



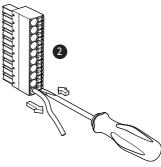

# **COUPLER MODULE (P366)**

The P366 Flexslice EtherCAT Coupler connects EtherCAT with the EtherCAT I/O slices. The coupler converts the passing telegrams from Ethernet 100BASE-T to EBUS signal format, and provides power to attached modules.

۲

The coupler is connected to the network via the upper Ethernet interface. The lower RJ45 socket may be used to connect further EtherCAT devices in the same strand. The P366 coupler and system can be installed at any position in the EtherCAT network, making it suitable for operation close to the master or at a remote position.


### CONNECTIONS

Power Supply	24V dc (±20%) Class 2 transformer or power supply, 0.8A min	
EtherCAT In	RJ45	
EtherCAT Out	RJ45	
Max Load	16	
Recommended screened cable for EtherCAT; Cat5 SF/UTP		



RN Green "RUN" LED

LA Green EBUS Link/Act LED





# **POWER CONNECT MODULE (P362)**

۲

(Sold as Pack of 10 - P462)


The P362 Flexslice Power Connect provides a solution for simple and convenient wiring of 3 wire sensor power and return wires. The pins of the 2 x singlerow push-in connectors are joined together to form 2 isolated banks of commoned connections. With OV connected to the lower connector and 24V to the upper connector, the LED gives an indication that power is on.

### CONNECTIONS

Module current consumption (EBUS 5V)	0mA
Power supply requirement	24V dc (±20%) Class 2 transformer or power supply
Max connector current	4A
Unit Load	0

#### LED'S

PWR Red "Power" LED



5



**(** 

# **THERMOCOUPLE (P367)**


(Sold as Pack of 10 - P467)

The P367 Flexslice Thermocouple module has 4 thermocouple inputs, each digitised to a resolution of 16 bit. The 4 thermocouple inputs are brought out to a single row push-in connector. A second single row push-in connector has 4 relay outputs for control of a heater or other switched load.

۲

### CONNECTIONS

Power Supply	via the EBUS
Module current consumption (EBUS 5V)	160mA max
Number of Inputs	4
Thermocouple types	J, K, T, E
Resolution	16 bit
Number of Relays	4
Relay type	Normally open (NO) solid state relay
Load type	Resistive, inductive and capacitive
Max. Output Voltage	24V
Max Output Current	100mA
Unit Load	1.25





#### LED'S

- RN Green "RUN" LED
- 0 3 LH Bank Yellow LEDs relay outputs
- 0 3 RH Bank Red LEDs relay input status / warning



# **RTD MODULE (P368)**

(Sold as Pack of 10 - P468)

The P368 Flexslice RTD module has 4 resistance temperature detector (RTD) inputs, each digitised to a resolution of 16 bit. The 4 RTD inputs are brought out to single row push-in connectors. 4 relay outputs are provided for control of a heater or other switched load.

۲

#### CONNECTIONS

Power supply	via the EBUS
Module current consumption (EBUS 5V)	160mA max
Number of Inputs	4
RTD types	PT100, PT1000 2 or 3 wire
Resolution	16 bit
Number of Outputs	4
Output type	Normally open (NO) solid state relay
Load type	Resistive, inductive and capacitive
Max. Output Voltage	24V
Max Output Current	100mA
Unit Load	1.25

RN 0 3 3 R0+ R0-ROL R1-R1-R1L RELAY0+ RELAY0- -RELAY1+ -RELAY1-R2+ R2-R2L R3-R3-R3L RELAY2+ RELAY2-RELAY3+ -RELAY3-



Rx- and RxL must be connected together with a short wire link if a 2 wire RTD is used

#### LED'S

- RN Green "RUN" LED
- 0 3 LH Bank Yellow LEDs relay outputs
- 0 3 RH Bank Red LEDs relay input status / warning




# 16-OUT PNP MODULE (P371)

(Sold as Pack of 10 - P471)

The P371 digital output slice connects the binary control signals from the *Motion Coordinator* to the machine's input devices at 24V dc. All 16 outputs are current sourcing (PNP) type and have electrical isolation. Outputs and power connection are via 2 x single-row push-in connectors. The Flexslice module indicates the output signal states via LEDs.

### CONNECTIONS

Power Supply	24V dc (±20%) Class 2 transformer or power supply
Output bank 1	8 x 24V dc Outputs, 0.5A max per channel
Output bank 2	8 x 24V dc Outputs, 0.5A max per channel
Max current	4 Amps per bank
Isolation Outputs to EBUS	1,000V dc
Isolation between banks	1,000V dc
Unit Load	1



#### LED'S

RN	Green	"RUN"	LED

0 - 15 Yellow LEDs Output status



IF BOTH BANKS ARE USED, EACH ISOLATED 24V AND OV MUST BE WIRED.

۲



# 16-IN PNP MODULE (P372)

(Sold as Pack of 10 - P472)

The P372 digital input slice connects 24V dc signals from devices on the machine to the binary control registers in the *Motion Coordinator*. All 16 inputs are current sinking (PNP) type and have electrical isolation. Inputs and power connection are via 2 x single-row push-in connectors. The Flexslice module indicates the input signal states via LEDs.

۲

### CONNECTIONS

Power Supply	None
Input bank 1	8 x 24V dc Inputs, 3.5mA typ, 0V common
Input bank 2	8 x 24V dc Inputs, 3.5mA typ, 0V common
Isolation Outputs to EBUS	1,000V dc
Isolation between banks	1,000V dc
Unit Load	1

### LED'S


RN Green "	'RUN"	LED
------------	-------	-----

0 - 15	Yellow	LEDs	Input	status
--------	--------	------	-------	--------



IF BOTH BANKS ARE USED, EACH ISOLATED OV MUST BE WIRED.

•



all Flexslice.indd 9

**(** 

# ANALOGUE 2 SERVO AXES (P374)


(Sold as Pack of 10 - P474)

The P374 Flexslice Analogue 2 Servo Axis Module allows up to 2 servo motors, stepper motors or encoders to be connected to a control system. It supports incremental encoder inputs. If configured for stepper / pulse output an axis can be pulse+direction or quadrature simulated encoder output. Two 20 way MDR connectors provide a reliable shielded connection for high speed signals. Each MDR connector supports all the signals for full closed loop control of a servo axis.

•

#### CONNECTIONS

Module current consumption (EBUS 5V)	180mA max
Max Axes	2 (software configurable)
Max Enc Rate	8M Edges/s encoder count
Max Step Rate	8MHz pulse count
Step / Pulse Width	Pulse Control or Square Wave
Enc / Step Input / Output	RS422
DAC Voltage Output	2 x 12bit +/-10V @ 5mA
Registration Inputs	4 x 24V Isolated PNP inputs
WDOG Output	2 x Normally open (NO) solid state relay
WDOG Max. Output Voltage	24V
WDOG Max Output Current	100mA
Field Programmable	Yes
Power Supply	24V dc (±20%) Class 2 transformer or power supply @100mA
Unit Load	2.5



#### LED'S

RN Green "RUN" LED	RN	Green	"RUN"	LED
--------------------	----	-------	-------	-----

- WD Red "WDOG" LED
- 0 2 Yellow LEDs Input status for each axis



See next page for pin-outs.

۲


10

### **PIN OUTS P374**

Top Connector-

Axis 0

Pin	Function
1	A/STP0+
2	A/STP0-
3	B/DIR0+
4	B/DIR0-
5	+5V Enc (100mA max.)
6	Do not connect
7	WDOG A0
8	WDOG B0
9	Input A0+
10	Input A0/ B0 0V
11	Z/ENB0+
12	Z/ENB0-
13	Do not connect
14	Do not connect
15	0V Enc
16	Do not connect
17	Vout0+
18	Vout0-
19	Do not connect



Bottom Connector-

۲

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

1

()


Vout1+

Vout1-Do not

connect

Input B1+

# Axis 1 Pin Function A/STP1+ 24V · A/STP1-B/DIR1+ B/DIR1-+5V Enc (100mA max.) Do not connect WDOG A1 WDOG B1 Input A1+ Input A1/ B1 0V Z/ENB1+ Z/ENB1-Do not connect Do not connect 0V Enc Do not connect







# 3 AXIS STEP / ENCODER (P375)

۲

12


( )

(Sold as Pack of 10 - P475)

The P375 Flexslice 3 Axis Step / Encoder Module controls up to 3 Stepper motors with Pulse/ Direction/Enable or 3 encoders with A, B and Z inputs for each axis. There is also one global watchdog output independent from the axis configuration.

### CONNECTIONS

Power Supply		24V dc (±20%) Class 2 transformer or power supply			
Axis c	onnector	26 way	26 way MDR with latch		
Unit L	.oad	2			
Pin	Function		Pin	Function	
26	WDOG A		13	WDOG B	
25	OV EXT		12	B/DIR2-	
24	5V EXT		11	B/DIR2+	
23	Z/ENB2-		10	A/STP2-	
22	Z/ENB2+		9	A/STP2+	
21	0V EXT		8	B/DIR1-	
20	5V EXT		7	B/DIR1+	
19	Z/ENB1-		6	A/STP1-	
18	Z/ENB1+		5	A/STP1+	
17	0V EXT		4	B/DIR0-	
16	5V EXT		3	B/DIR0+	
15	Z/ENB0-		2	A/STP0-	
14	Z/ENB0+		1	A/STP0+	



۲

# LED'S

RN	Green "RUN" LED
WD	Red "WDOG" LED
9x	Yellow LEDs status

 $(\mathbf{1})$ 


# 16-OUT NPN (P376)

(Sold as Pack of 10 - P476)

The P376 digital output slice connects the binary control signals from the *Motion Coordinator* to the machine's input devices, such as relays, contactors, valves, lamps etc. at 24V dc. All 16 outputs are current sinking (NPN) type and have electrical isolation. Outputs and power connection are via 2 x single-row push-in connectors. The Flexslice module indicates the output signal states via LEDs.

### CONNECTIONS

Power Supply	24V dc (±20%) Class 2 transformer or power supply
Output bank 1	8 x Outputs, 24V dc 1.0A max per channel
Output bank 2	8 x Outputs, 24V dc 1.0A max per channel
Max current	4 Amps per bank
Isolation Outputs to EBUS	1,000V dc
Isolation between banks	1,000V dc
Unit Load	1



#### LED'S

- RN Green "RUN" LED
- 0 15 Yellow LEDs Output status



IF BOTH BANKS ARE USED, EACH ISOLATED 24V AND 0V MUST BE WIRED.

۲



# 16-IN NPN (P377)

(Sold as Pack of 10 - P477)

The P377 digital input slice connects 24V dc signals from devices on the machine to the binary control registers in the *Motion Coordinator*. All 16 inputs are current sourcing (NPN) type and have electrical isolation. Inputs and power connection are via 2 x single-row push-in connectors. The Flexslice module indicates the input signal states via LEDs.

۲

#### CONNECTIONS

Power Supply	24V dc (±20%) Class 2 transformer or power supply
Input bank 1	8 x NPN Inputs, 3.5mA typ, 24V dc common
Input bank 2	8 x NPN Inputs, 3.5mA typ, 24V dc common
Isolation Outputs to EBUS	1,000V dc
Isolation between banks	1,000V dc
Unit Load	1

## LED'S


|--|

0 - 15 Yellow LEDs Intput status



IF BOTH BANKS ARE USED, EACH ISOLATED 24V MUST BE WIRED.

14



# 8 ANALOGUE OUTPUTS (P378)

۲

(Sold as Pack of 10 - P478)


The P378 Flexslice 8 Analogue Output module has eight programmable voltage range output terminals, each output has a resolution of 12 bit. The 8 single ended outputs have a common OV potential and are brought out to a single row push-in connector.

#### CONNECTIONS

Power Supply	None
Analogue Outputs	8 x +/-10V, 0 +10V
Output current	5mA (max)
Output Resistance	16Ω internal
Isolation Outputs to EBUS	1,000V dc
Unit Load	4

### LED'S

- RN Green "RUN" LED
- S0 S1 Yellow LEDs Output status



RN

S0 S1





♣

# 8 ANALOGUE INPUTS (P379)

(Sold as Pack of 10 - P479)

The P379 Flexslice 8 Analogue Input module has eight programmable voltage range input terminals, each digitised to a resolution of 12 bit. The 8 single ended inputs have a common 0V potential and are brought out to a single row push-in connector.


۲

#### CONNECTIONS

Power Supply	None
Analogue Inputs	8 x +/-10V, 0 +10V
Overvoltage protection	+/- 25V
Input resistance	>31kΩ internal
Isolation Outputs to EBUS	1,000V dc
Unit Load	1.25

## LED'S

S0 - S1 Yellow LEDs Output status

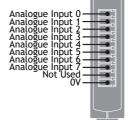

RN

SO O



# 8-IN ANALOGUE CURRENT (P359)

۲

(Sold as Pack of 10 - P459)

The P359 Flexslice 8 Analogue Current Input module has eight input terminals, each digitised to a resolution of 12 bits. The 8 single ended inputs have a common 0V potential and are brought out to a single row push-in connector


### CONNECTIONS

Power Supply	None
Analogue Inputs	4-20mA
Overvoltage protection	+/- 25V
Internal resistance	249Ω
Isolation Outputs to EBUS	1,000V dc
Unit Load	125

### LED'S

RN	Green	"RUN"	LED

S0 - S1 Yellow LEDs Output status

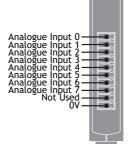

RN

S0 S1






# 32-OUT NPN (P386)

(Sold as Pack of 10 - P483)

The P386 digital output slice connects the binary control signals from the *Motion Coordinator* to the machine's input devices, such as relays, contactors, valves, lamps etc. at 24V dc. All 32 outputs are current sinking (NPN) type and have electrical isolation. Outputs and power connection are via 2 x doublerow push-in connectors. The Flexslice module indicates the output signal states via LEDs.

### CONNECTIONS

Power Supply	24V dc (±20%) Class 2 transformer or power supply	
Output bank 1	16 x Outputs, 24V dc 1.0A max per channel	
Output bank 2	16 x Outputs, 24V dc 1.0A max per channel	
Max current	4 Amps per bank	
Isolation Outputs to EBUS	1,000V dc	
Isolation between banks	1,000V dc	
Unit Load	1	

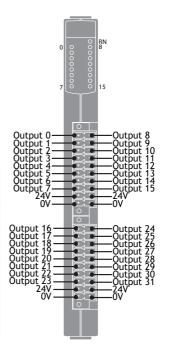

### LED'S

RN Green	"RUN"	LED
----------	-------	-----

0 - 15 Yellow LEDs Output status



IF BOTH BANKS ARE USED, EACH ISOLATED 24V AND 0V MUST BE WIRED.

 $(\mathbf{\Phi})$ 

۲

# 32-IN NPN (P387)


(Sold as Pack of 10 - P484)

The P387 digital input slice connects 24V dc signals from devices on the machine to the binary control registers in the Motion Coordinator. All 32 inputs are current sourcing (NPN) type and have electrical isolation. Inputs and power connection are via 2 x double-row push-in connectors. The Flexslice module indicates the input signal states via LEDs.

۲

### CONNECTIONS

Power Supply	24V dc (±20%) Class 2 transformer or power supply
Input bank 1	16 x NPN Inputs, 3.5mA typ, 24V dc common
Input bank 2	16 x NPN Inputs, 3.5mA typ, 24V dc common
Isolation Outputs to EBUS	1,000V dc
Isolation between banks	1,000V dc
Unit Load	1

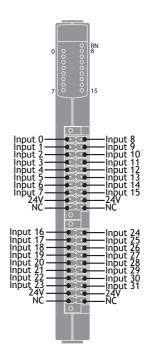

#### LED'S

•

all Flexslice.indd 19

	RN	Green	"RUN"	LED
--	----	-------	-------	-----

0 - 15 Yellow LEDs Intput status




IF BOTH BANKS ARE USED, EACH ISOLATED 24V MUST BE WIRED.

19

 $(\mathbf{\Phi})$ 





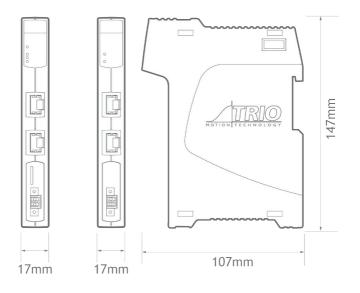

۲

# UK | USA | CHINA | INDIA WWW.TRIOMOTION.COM

THE MOTION SPECIALIST

CAD data Drawings to aid packaging and mounting are available in various formats from the Trio web site. Products should be wired by qualified persons. Specifications may change without notice. E & DE

Quick Start v10 July 2024



( )

(4)